



CHANGING CHANNELS

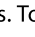
Use **▲▼** to scroll through the channels until you have reached your desired channel.

PLEASE NOTE: Channels 16-22 are LISTEN ONLY

DUAL DISPLAYS

- The V3 normally displays a single channel, but it has the capability to display two channels. This is useful if you continuously switch between channels, or need to monitor 2 channels at once.
- To turn on the second channel display press **FUN, 6, FUN**. Then press **▼** to turn on. Press **FUN** to save and **EXIT** twice to leave the menu. To alternate between the top and bottom channels, press **A/B**.

KEYPAD LOCK/UNLOCK

- To manually lock the keypad, press and hold ***** (**lock**) on the bottom left of the face of the radio until the lock symbol  appears. To unlock, press and hold ***** until the lock symbol disappears.
- To turn on Auto Lock press **FUN, 1, 4, FUN** followed by either **▲▼** and **EXIT** to leave the menu. This feature locks the radio keypad if there is no key operation for 5 seconds.

FM RADIO

- To activate FM Radio listening, press **FM**
- Use **▲▼** or keypad to tune the desired frequency.

MONITOR A CHANNEL

Hold **MONI** to temporarily change the squelch to zero allowing you to hear very weak signals.

PROGRAMMING

For custom programming software, please contact:

RT Systems
800.921.4834
rtsystemsinc.com

