



**INSTALLATION INSTRUCTIONS: Polaris 570  
mid-size, crew roof**

*It is recommended that bolts remain "hand tight" until all bolts are installed.*



**Front Roof Panel**



**Rear Roof Panel**



**Rear Dust Panel**



**Center Roof Clamp Set (3 sets)**



**Side Roof Clamp (6)**

**INSTALLATION INSTRUCTIONS: Polaris 570  
mid-size, crew roof**

**STEP 1**



- Locate the holes to be used to install the Rear Dust Panel on the rear section of the ROPS.

**STEP 2**



- Using the provided bolts, install the Rear Dust Panel.

**STEP 3**



- Loosely set in place the 3 Center Roof Clamps.


**INSTALLATION INSTRUCTIONS: Polaris 570  
mid-size, crew roof**

**STEP 4**




- Set the Rear Roof Panel first.
- Set the Front Roof Panel in, overlapping the rear panel.

**STEP 5**

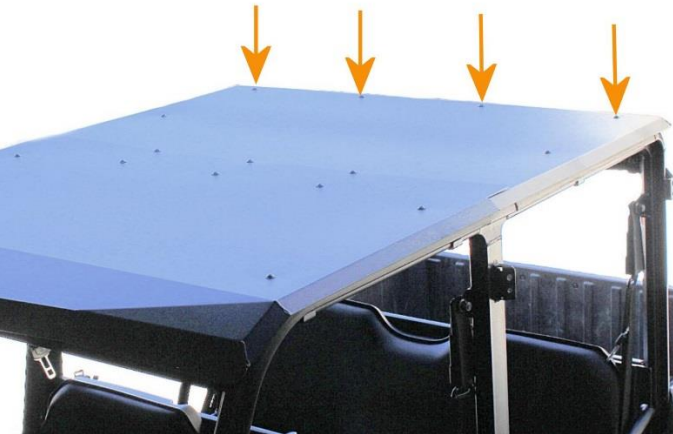

- Align the rear section of holes in the Rear Roof Panel with the corresponding holes of the Rear dust panel.
- Insert the provided bolts (with flat washer).
- Get the bolts started but leave loose for future adjustment.


**STEP 6**

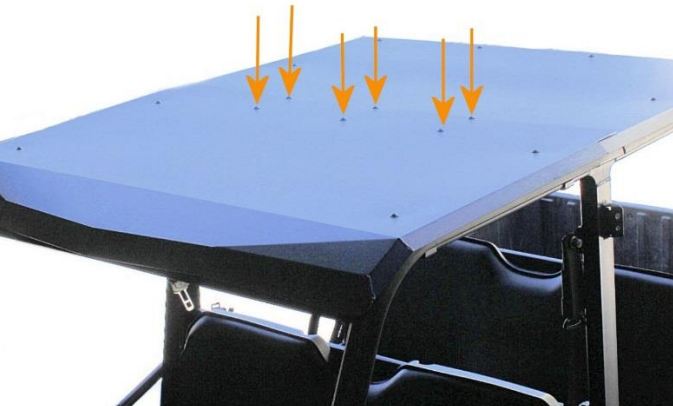

- Align the corresponding holes of the Front and Rear Roof Panels with the Center Roof Clamps previously installed (step 3).
- Insert the provided bolts (with flat washer).


**INSTALLATION INSTRUCTIONS: Polaris 570  
mid-size, crew roof**

**STEP 7**

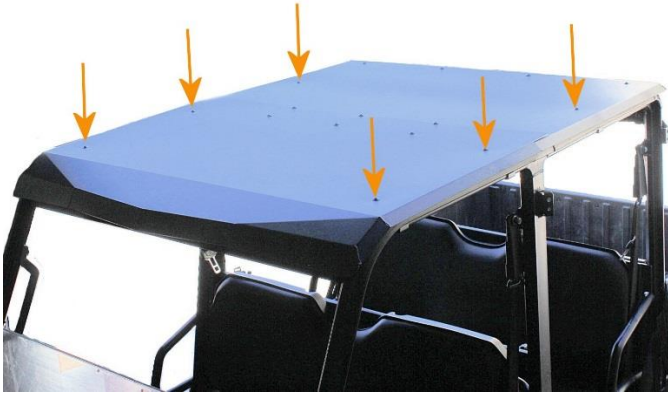


- Install the Side Roof Clamps.

**STEP 8**

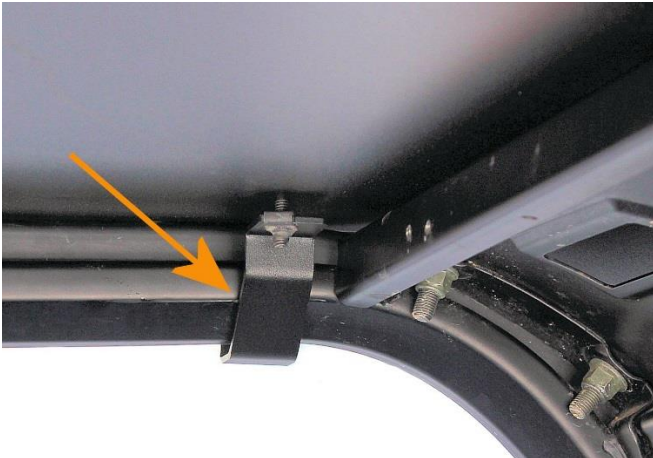

- Align the corresponding holes with the front and rear roof panels and insert the provided bolts (with flat washers).
- Shown here is how the clamp fits around the profile tubing.

**STEP 9**

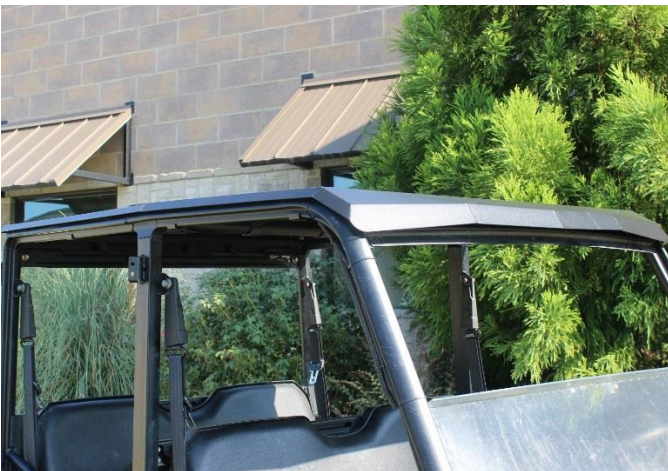

- Make any final adjustments to square the roof.
- Tighten all bolts.