




## 85640 –ATV RECEIVER HITCH

No.	Description	Quantity
1	Receiver	1
2	Drawbar	1
3	5/8" x 3.00" Bent Hitch Pin	1
4	R-Pin	1

No.	Description	Quantity
5	3/4" x 1.75" Hex Head Bolt	1
6	3/4" Nut	1
7	3/4" Star Washer	1
8	3/4" Lock Washer	1

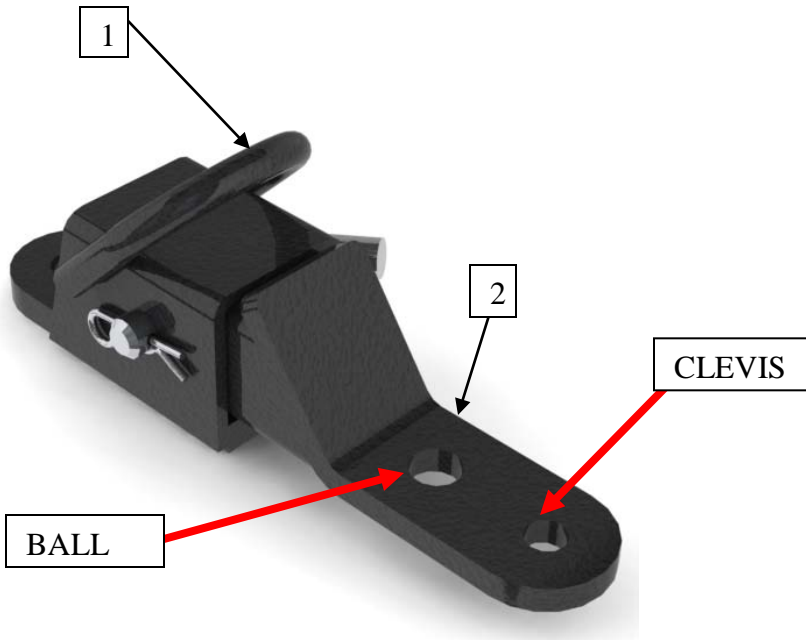

### Hitch Mounting:

1. Place the hitch on the OEM Ball Mount of your ATV.
2. Place the Star Washer between the Kolpin Hitch and the OEM Ball Mount.
3. Insert the 3/4" Hex Head Bolt through the hitches.
4. Next, slide on the 3/4" Lock Washer Provided, and the 3/4" Nut. Tighten Securely! See order above for correct attachment!
5. The larger diameter hole is for a standard shank hitch ball. The smaller diameter hole is for a clevis attachment.

Kolpin Outdoors, Inc.  
 205 N. Depot St, Fox Lake, WI 53933  
 Phone #: (877) 9KOLPIN or (920) 928-3118  
[www.kolpin.com](http://www.kolpin.com)  
[customerservice@kolpin.com](mailto:customerservice@kolpin.com)