



UTV & ATV Armor Kit Installation Tips

Thank for your purchase of this Ricochet Off-Road Armor Kit. All of our kits are custom designed to fit each model and should install hassle free with no additional modifications required. Please carefully read through all included instruction sheets before beginning your install.

The tips described on this sheet are general mounting tips that may or may not apply to your particular model, refer to the attached model specific instructions for a step by step mounting procedure.

If you do encounter a problem during installation please check the FAQ on our website or feel free to contact us by phone or email using the contact info at the bottom of this page.

Required Tools:

(refer to your hardware placement guide for bolt sizes)

Button Head TORX Bolts: (socket bit is highly recommended)

8mm bolts use a T-40 TORX bit

6mm bolts use a T-30 Torx bit

Hex Bolts & Nuts:

10mm bolts uses 17mm

8mm bolts uses 13mm

6mm bolts uses 10mm

1/4"-20 bolts uses 7/16"

Drill Bits:

While we try to avoid drilling whenever possible some models require one or two mounting points to be match drilled. When instructions call for a drilled mounting point use an **11/32"** bit to match drill through the mounting point on the skid plate only after the plate has been fully secured to your machine using the other hardware listed on your hardware guide.

Locking Nuts:

Most sets will include two types of locking nuts. Loose nuts are Nylock, and any nuts welded onto other hardware are pinch-style Stover lock nuts. It is highly recommended that you use a bit of Anti-seize or a drop of oil on the threads of the welded-on pinch style nuts, this will make the bolts go on and come off much easier.

Other helpful tips:

- Before you begin the installation organize all the included hardware according to the hardware placement sheet so you can quickly find the correct bolts and brackets when you need them.
- Install all bolts finger-tight at first until all hardware has been installed, this will give you maximum adjustability.
- When using the cupped washers to secure the plates to factory mounting points do not over torque the bolts because the threads can strip easily. If you do strip one out the simplest way to repair the thread is to use a 1/4"-20 x 5/8" self tapping bolt.
- You may find it easier to remove the rear tires when installing the rear a-arm guards, it's typically very tight and hard to see when the tires are left on.

Contact us at 1-866-273-1197 or dh_gibbs@comcast.net with any questions or concerns.

Hardware List for P/N 7556/F


Bash Plate (P/N 755T)

- 5) 8 x 25mm Button Head Bolts
- 1) 1/4" x 20 Hex Bolt
- 5) 8mm Flat Washers
- 1) 1/4" Lock Washer
- 5) #700-06 Nut Plates
- 1) #833 Cupped Washer

700-06



700-07

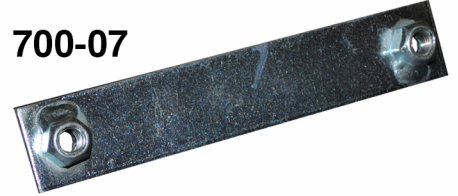

700-36



Center Skid Plates (P/N 756M & 756C)

- 22) 1/4 x 20 Hex Bolts
- 22) 1/4" Lock Washers
- 22) #833 Cupped Washer

Rear Skid Plate (P/N 755R)

- 2) 8 x 25mm Button Head Bolts
- 1) 1/4 x 20 Hex Bolt
- 2) 8mm Flat Washers
- 1) 1/4" Lock Washer
- 1) #833 Cupped Washer
- 2) #700-06 Nut Plate

Front A-Arm Guards (P/N 755AFA & 755AFB)

- 8) 1" Clamps
- 8) 8 x 20mm Button Head Bolts
- 8) 8mm Flat Washers

Floorboard Skids (P/N 756FBA & 756FBB)

- 12) 8 x 20mm Button Head Bolts
- 6) 8 x 25mm Button Head Bolts
- 2) 8 x 30mm Button Head Bolt
- 8) 5/16" HD Flat Washers (larger washer)
- 14) 8mm Flat Washers
- 6) #700-36 Nut Plates
- 6) #700-07 Nut Plates
- 2) 8mm Nylock Nuts

Rear A-Arm Guards (P/N 755ARA & 755ARB)

- 8) #826 Clamps
- 8) 8 x 20mm Button Head Bolts
- 8) 8mm Flat washers

Mouting Tips

- Begin by removing all factory plastic skid plates.
- Apply a drop of oil or anti-sieze compound to the threads off each of the locking nuts welded on to the clamps and nut plates.
- Install the #700-07 Nut Plate inside the floor board bracing bar as shown in Fig 1. Use the larger HD washer & the 8 x 20mm Bolt to secure it in place.
- Slide the #700-36 Nut Plate into place inside the floorboard bracing bar as shown in Fig 2.
- Now install your skid plates using the hardware listed on your hardware placement guide, leave everything loose at first until all the bolts are threaded into place. Then you may tighten everything down keeping the plates butted up against one another to create smooth transitions between the plates
- To provide extra support you may want to consider bolting the front of the Floorboard skids to the floorboards themselves. After the floorboard skids have been installed match drill through the front mouting point using an 11/32" bit. Drill completely through the floorboard itself and use the Large HD washer and Nylock nut on the floorboard side to complete the installation.



Fig 1



Fig 2

